< HANDY SYSTEM >

Boxoft Image To PDF Demo. Purchase from www.Boxoft.com
to remove the watermark

USER'S GUIDE

IQ-901

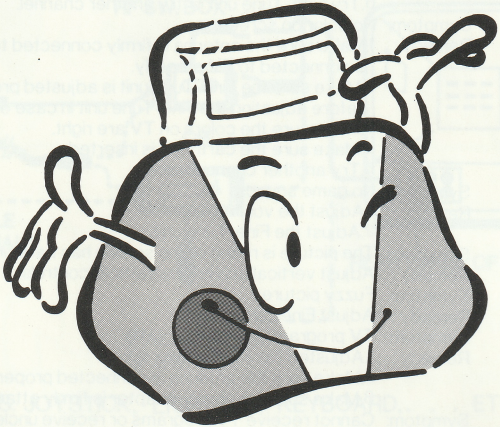

Video Game Entertainment Series

1 DIAGRAM OF CONTROL DECK

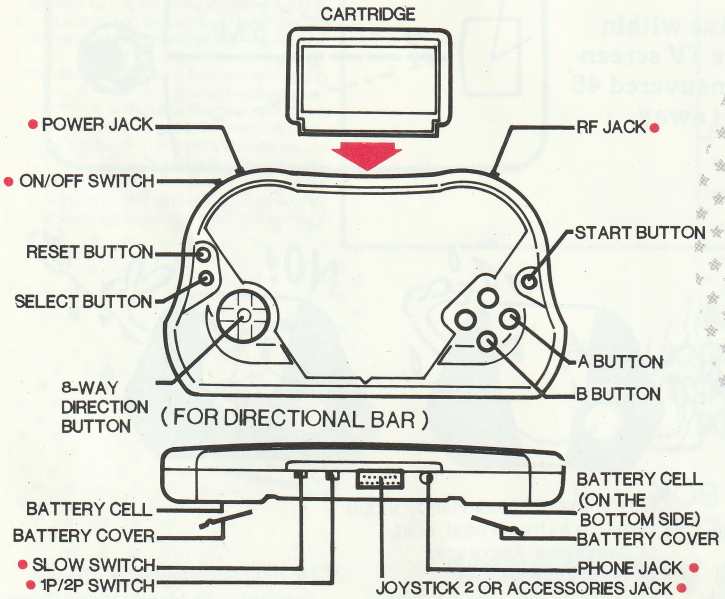

The key parts:

- POWER JACK: USE WITH AC DC ADAPTOR OR RECHARGEABLE BATTERY PACK.
- ON/OFF SWITCH: FOR POWER ON/OFF USE.
- RF JACK: FOR ANTENNA STICK OR RF CABLE USE.
- SLOW SWITCH: TURN TO RIGHT: THE MOTION WILL SLOW DOWN✱
- 1P/2P SWITCH: WHEN YOU PLAY WITH JOYSTICK 2 TURN THE SWITCH TO "2P".
- PHONE JACK: FOR STEREO EARPHONE USE ONLY.
- JOYSTICK 2 JACK: FOR JOYSTICK 2 OR ACCESSORIES USE.

✱OPTION ONLY AVAILABLE ON SOME CARTRIDGES.

2 CONNECTION FLOW CHART

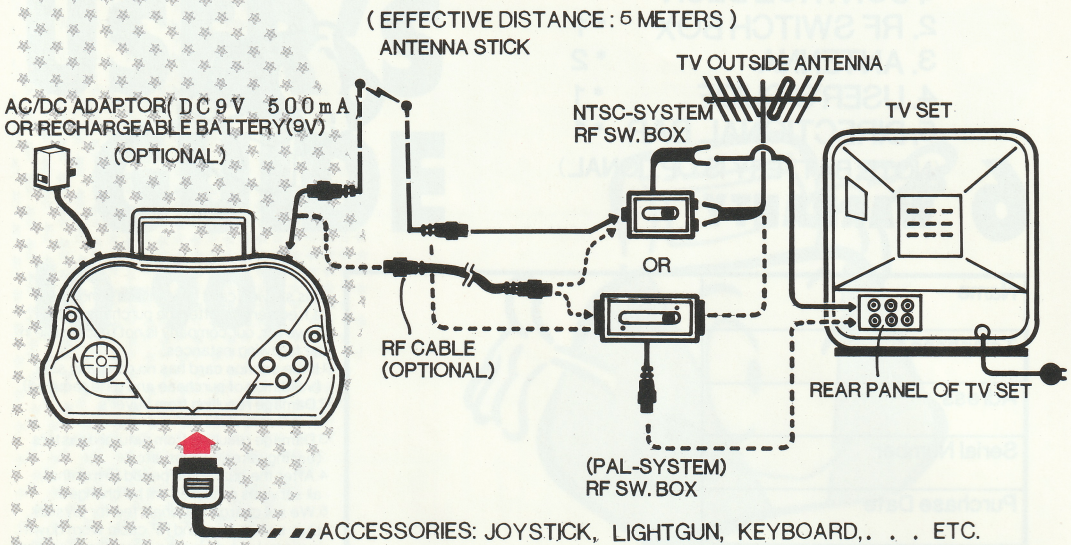

3 TROUBLE SHOOTING

Symptom: No screen on TV:
Remedy : 1.Make sure the cartridge is plugged in. Power off before inserting cartridge.
2.Make sure the AC/DC adaptor is plugged in and the battery is not powerless.
3.Make sure the TV is on and the chanel is right.
4.Make sure the connection on TV is OK.
5.Make sure the RF Switch has been adjusted to "COMPUTER".
6.Try Fine-Tune unit or try another channel.

Symptom: No color on screen:
Remedy : 1.Make sure the antenna is firmly connected to RF Switch and the RFSwitch is connected to TV properly.
2.Make sure the Fine-Tune unit is adjusted properly. Turn off Auto.AFTAFC before adjusting the Fine-Tune unit in case of unclear screens.
3.Make sure the colors on TV are right.
4.Make sure the cartridge is inserted.
5.Try another channel.

Symptom: No game sounds:
Remedy : 1.Adjust the volume.
2.Adjust the Fine-Tune unit.

Symptom: The picture is rolling or the screen has bars or lines on it:
Remedy : Adjust vertical and horizontal hold controls.

Symptom: Fuzzy picture:
Remedy : Adjust Fine-tune units.

Symptom: TV program shows up:
Remedy : 1.Adjusted the RF Switch.
2.Make sure the antenna is connected properly.
3.Make sure the power adapter is firmly attached.

Symptom: Cannot receive TV programs or receive unclearly:
Remedy : 1.Make sure the antenna RF Modulator is adjusted to "TV" position.
2.Make sure the AV terminal is switched to "TV" position.

REMARK : 1.PLEASE BE SURE EXPENSION ACCESSORIES-KEYBOARD, DISK DRIVE,INFRARED LIGHT PHASER IS INSERTED INTO JOYSTICK 2.

4 CARE AND PRECAUTIONS

ANTENNA OPERATION:

Console is effective within five meters of the TV screen. It can also be maneuvered 45° to the left or right away from the screen.

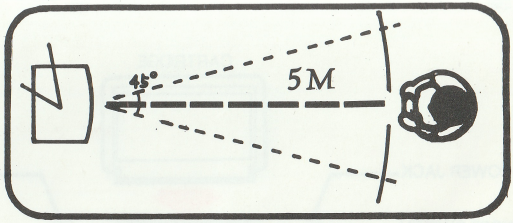

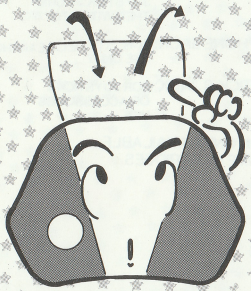

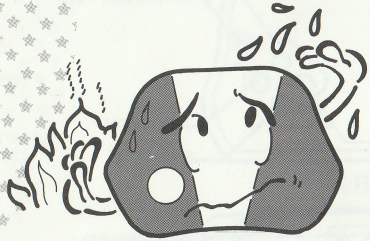

- Always turn off the power switch on your Handy Video Game before inserting or removing Game Cartridge.
- Do not expose your Handy Video Game to extreme heat, cold, or dampness. Also avoid cleansing with thinner, alcohol and other such solvents.
- Do not disassemble or attempt to repair your Handy Video Game.

5 STANDARD ACCESSORIES

1. CONTROL DECK *1
2. RF SWITCH BOX *1
3. ANTENNA *2
4. USER'S GUIDE *1
5. DIRECTIONAL BAR *1

(NOTE: BATTERY IS OPTIONAL)

6 WARRANTY

Name	
Telephone	
Adress	
Serial Number	
Purchase Date	
Company	Company Seal

This service card guarantees 3 months of free service after the purchase date. However, our company is not responsible in the following instances:

1. If the service card has no company seal. (validation of purchase and date required)
2. Damage resulting from buyer's own "improvements"
3. Damage resulting from natural disasters (earthguakes, storms, etc.)
4. After the guarantee period (3 months), all services rendered will be changed.
5. We will charge materials fee for joystick, plug, switch box, and RF cable worn down in normal use during the 3 months guarantee period. They are consumption accessories.

- We will charge for services rendered in these five instances.

72-901E1-000